


## Circuit and some instructions for internal 384kB-sRAM-expansion

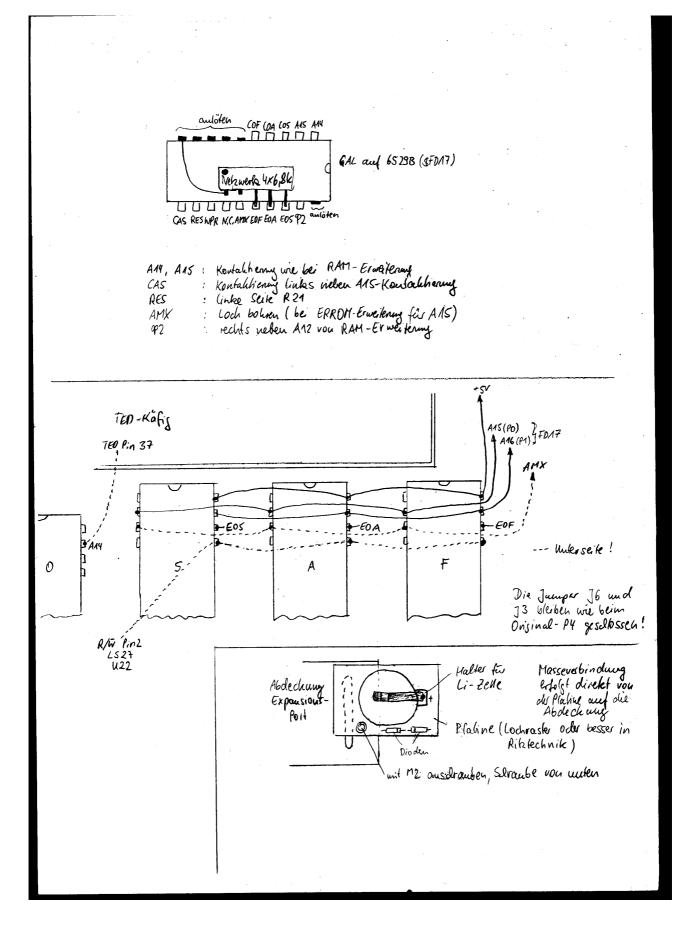

Note: To understand how the sRAM-expansion works read the instructions for the EPROMexpansion before. Specially for activating external modules/EPROMs. Solder/Synergy